


THE NEXT GENERATION  
OF 3D PRINTING  
IS HERE

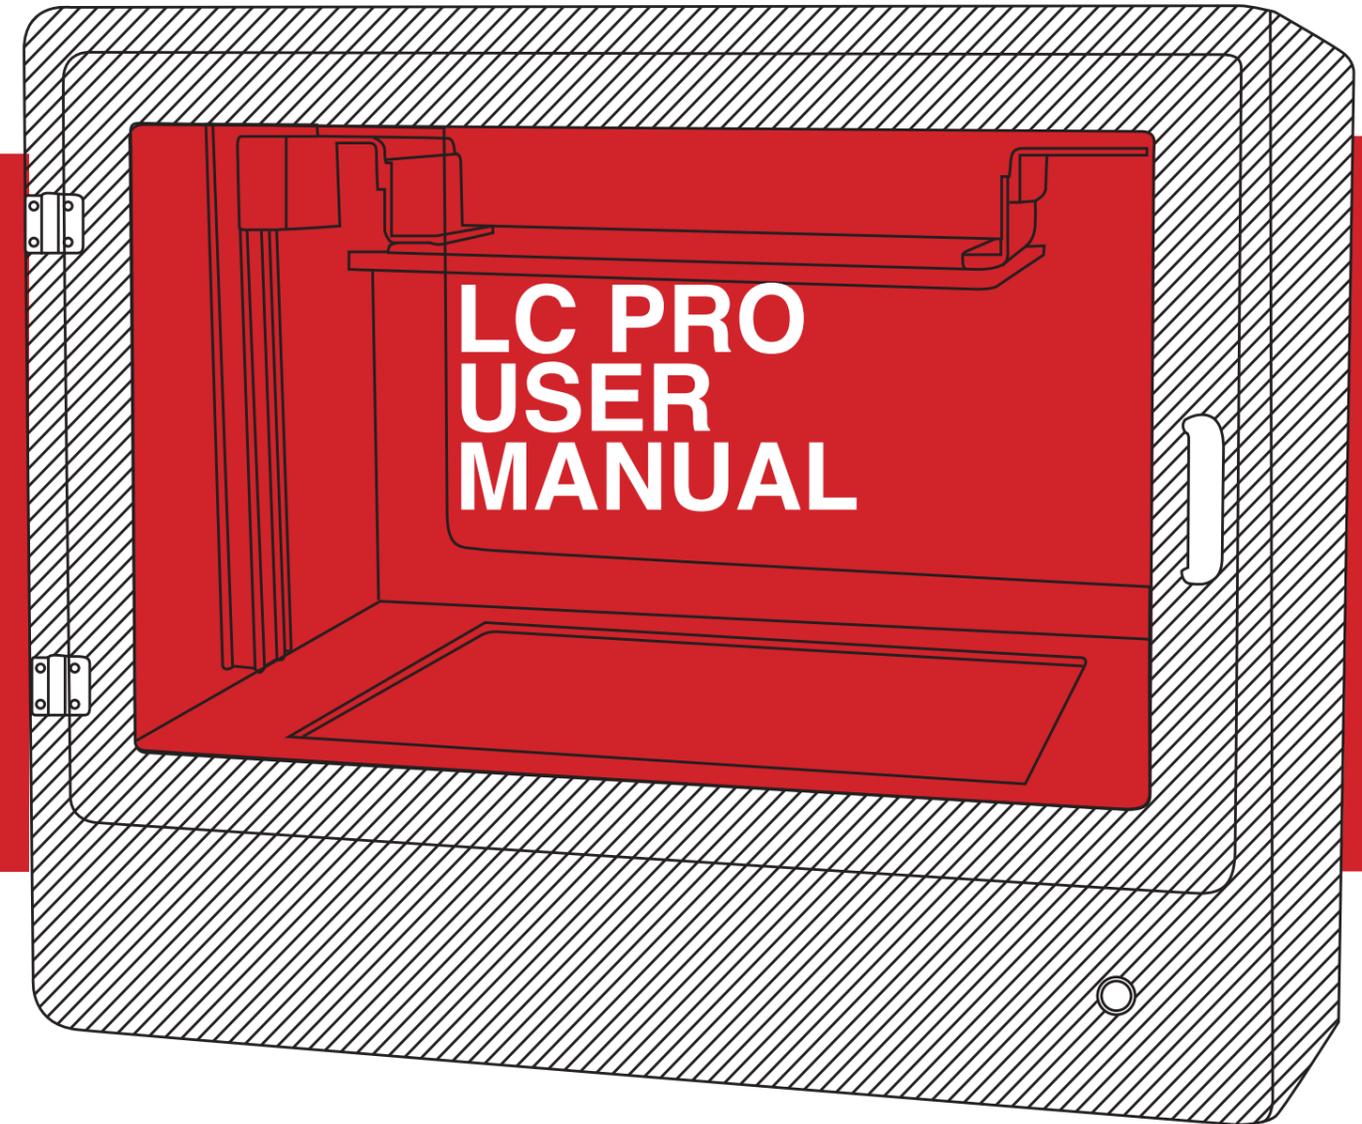

**DISPOSAL INSTRUCTIONS**

Do not throw this electronic device into the waste when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle or return to Photocentric for recycling.

**UK**  
Cambridge House, Oxney Road  
Peterborough PE1 5YW UK.  
info@photocentric3d.com  
www.photocentric3d.com

**USA**  
2205 West Parkside Lane, Phoenix,  
85027, AZ USA  
info@photocentric3d.com  
www.photocentric3d.com




Liquid Crystal

# LC PRO USER MANUAL



## Contents

<b>General information</b>	<b>1-2</b>
<b>Safety Information</b>	<b>3-4</b>
<b>Contents of Box</b>	<b>5</b>
<b>1. Installation &amp; assembly instructions</b>	<b>6</b>
<b>1.1 Software Installation</b>	<b>7-8</b>
<b>1.2 Connecting the printer</b>	<b>9</b>
<b>2. Slicing your print</b>	<b>10</b>
<b>3. Setting up a print</b>	<b>11-12</b>
<b>4. Removing the finished print, cleaning &amp; post exposing</b>	<b>13-14</b>
<b>5. Emptying and cleaning the vat</b>	<b>15-16</b>
<b>6. Detailed Creation Workshop software instructions</b>	<b>17-22</b>

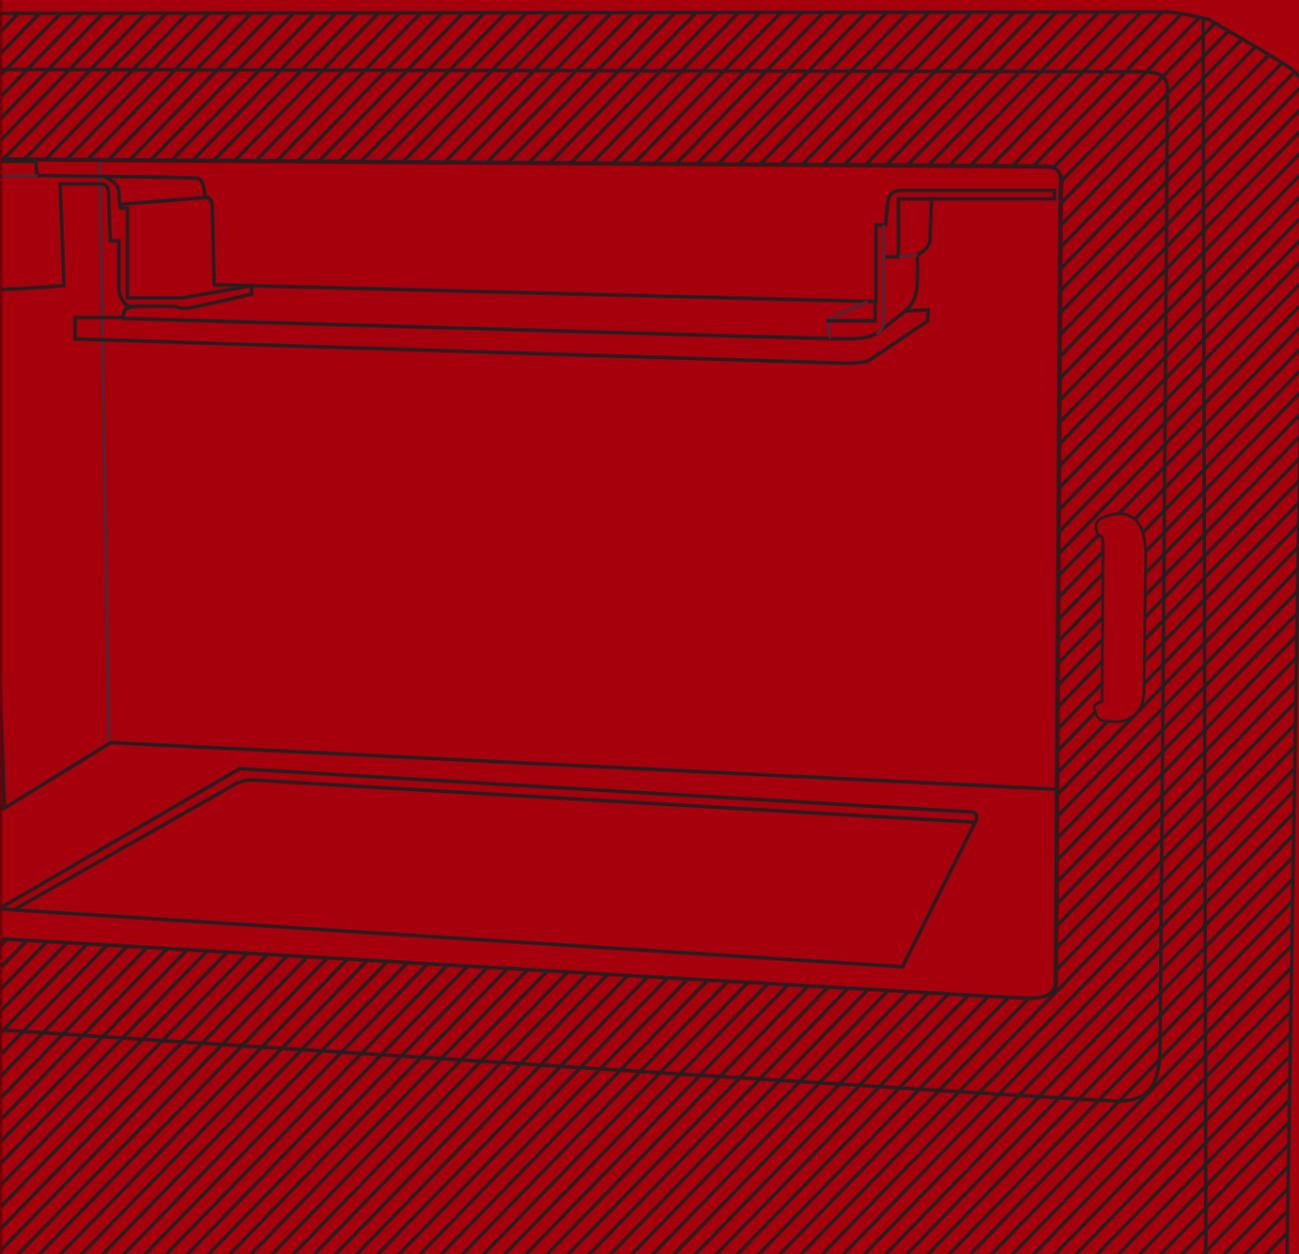

# EU DECLARATION OF CONFORMITY

LIQUID CRYSTAL 3D-PRINTER  
Model: LC Pro

We hereby declare that the product above is in compliance with the essential requirements of the following:

Low Voltage (LV) Directive 2009/95/EC, 2014/35EU. Electromagnetic Compatibility Directive(EMC), 2004/108/EC,2014/30/EU.

Restriction of the use of certain hazardous substances (RoHS) Directive, 2011/65/EU Commission Regulation (EU) No. 453/2010 and IEC 60950-1 Safety of ITE

Technical Documentation is stored at the manufacturer's address above.

Date of Issue: 08 June 2017  
Place of Issue: Peterborough

**Amanda Keating**  
Director

**Manufacturer**  
Photocentric Ltd  
Cambridge House, Oxney Road  
Peterborough, PE1 5YW, UK  
Year of CE Marking: 2017



# USER MANUAL

## NEW DAYLIGHT TECHNOLOGY HIGH RESOLUTION 3D PRINTER

*Congratulations!*

*You have just purchased a new type of 3D printer using Daylight Polymer Printing (DPP) technology. This is a patent applied-for method of image creation that hardens liquid with the normal visible light emitted from an LCD screen. This revolutionary system is a new method of Additive Manufacturing that uses the same intensity and part of the spectrum that we use to see. This is the energy providing source that initiates the free radical or cationic polymerisation necessary to change the liquid photopolymer resin into your hardened object. The light emitted from the screen is not modified and the images are safe for viewing.*

*These are some of the advantages of DPP technology:*

- i) Low cost- We use high resolution low cost LCD screens that are widely available in monitors, tablets, mobile phones and televisions. These provide phenomenal value for money, which we pass onto you.*
- ii) Reliable- Because we don't modify the back light the screens are used normally and have a long life expectancy.*
- iii) Very large scale- The screen lights every pixel,*



*which in turn exposes every voxel, so you can create large areas of custom product simultaneously. As the format grows this makes it much more efficient than all alternative means.*

- iv) Very low energy usage- It uses the amount of electricity to run a monitor, this is an order of magnitude lower than that required to operate a laser or a digital light projector.*
- v) Low adhesion at the build interface- the heat created by the screen is very low and the small amount of initiation energy in the polymerisation creates very little attraction to the vat film.*
- vi) Limited over-exposure- Using this low intensity visible light, the energy is dissipated very quickly, it either strikes a photoinitiator and creates a free radical or it loses all the energy hitting solid material, so there is very limited ability to over-expose and create solid parts where you don't want them.*

## SAFETY INFORMATION



Read the instructions carefully. Keep this document for future reference. Follow all warnings and instructions marked on the product.

- Operate on a table or flat, stable surface, ensuring that the machine cannot fall and is level.
- Do not operate outdoors.
- Do not allow resin or any liquids to get inside the chassis, wipe up any liquid spills immediately.
- Do not use solvents to clean the printer as they may damage the screen. Use a little detergent and warm water to clean any resin spills.
- Disconnect the printer from the power before storage or when not used for a long period of time. This 3D printer is connected to the electrical network with an input of 110 or 240 V AC, 50/60 Hz.
- Do not allow anything to rest on the power cord. Do not locate this product where people will walk on the cord.
- If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.
- Do not overload a power outlet, strip or receptacle by plugging in too many devices.
- Use the product only with the supplied power cable. If you need to replace the power, make sure that the new power cable meets the fo-

llowing requirements: detachable type, UL listed/CSA certified, VDE approved or its equivalent, 4.5 meters (15 feet) maximum

- In case of malfunction, disconnect the printer immediately from the power.
- Do not attempt to fix this product by yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all repairs to qualified service personnel. Please send an email to your national supplier or contact technical service at: [info@photocentric3d.com](mailto:info@photocentric3d.com)

Unplug this product from the wall outlet and refer servicing to a qualified service personnel if:

- The power cord or plug is damaged, cut or frayed.
- Liquid has been spilled in the machine.
- The machine was exposed to rain or water.
- The machine has been dropped or the case has been damaged.
- The machine does not operate normally after following the operating instructions.

## SAFETY GUIDELINES



IRRITANT

- Keep the printer and resins out of the reach of children.
- Printer requires two people to lift it from the packaging.
- The resin is an irritant to skin and eyes. Always wear gloves when coming into contact with the liquid resin. Always use in a well ventilated room.
- Resins are classified as irritants, not harmful, but in exceptional circumstances people can be sensitive to the resin and develop a skin irritation or rash. Avoid this possibility by always wearing gloves and avoid breathing fumes.
- The printer should be operated on a stable and level surface, preferably away from direct ambient light.

Please note that the latest instructions will always be available from:

[www.photocentric3d.com/support](http://www.photocentric3d.com/support)


## DISPOSAL INSTRUCTIONS




Do not throw this electronic device into the waste when discarding. To minimise pollution and ensure protection of the environment, please recycle or return to Photocentric for recycling.

# CONTENTS


The box contains

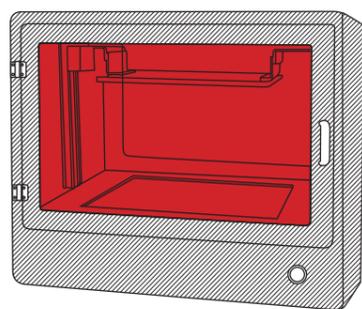

Liquid Crystal Pro Printer

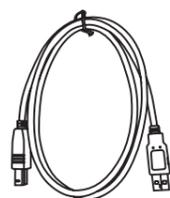

USB cable

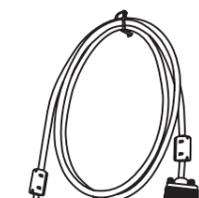

Display Port Cable



Power cable

- Scraper
- Ratchet Socket Wrench
- Vat Nut Socket
- Allen Key
- Funnel
- Paper Strainer x 10
- Spray Bottle
- Nitrile Gloves x 4
- Print Sample
- Vat Film pack sub-assembly
- Vat gasket pack sub-assembly

## MINIMUM COMPUTER REQUIREMENTS

- 1.2 GHz processor or above.
- Windows
- 2 GB RAM memory or above.
- Computer must support a UHD monitor and have a spare display port


## RECOMMENDED ITEMS

- Extra gloves.
- Paper towels.
- Access to a sink with hot water to clean the object.
- Liquid soap (detergent) to clean the object.
- Soft brush or sponge to clean the object.
- Glass or clear plastic container to post expose the object in.
- Ultrasonic Cleaner (Optional)

# 1. INSTALLATION & ASSEMBLY INSTRUCTIONS

## ASSEMBLY INSTRUCTIONS

1. Unscrew the side panels of the crate and remove them. The printer is heavy (approx. 65kg) so two people are needed to lift it from the pallet and into position.
2. Open the door and loosen the two bolts that secure the print plate assembly to the drive carriage.
3. Remove the whole print plate by sliding it out towards you and set it to one side. Remove the accessory box from inside the printer.
4. Remove the four vat bolts and carefully remove the vat. It is quite heavy.
5. Inspect the vat for damage caused during transit and if the film is in good condition, return it to the printer. Do not overtighten the vat bolts! They should lightly touch the vat and no more. There is no need for firm pressure on the vat. If any damage to the vat film is detected, check for leaks by filling with water and standing on absorbent paper for 5 minutes Then dry before use.



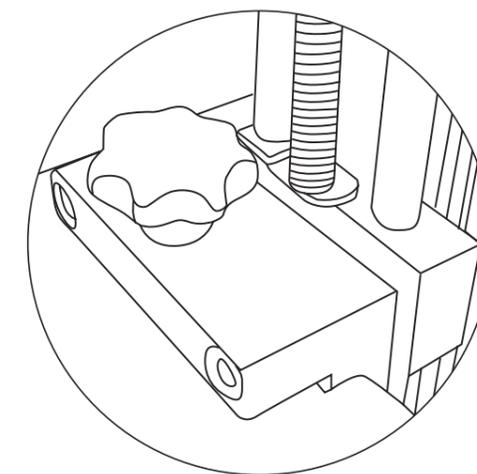


# 1.1. SOFTWARE INSTALATION



1. Go to [www.photocentric3d.com](http://www.photocentric3d.com) and download Creation Workshop for Liquid Crystal Pro which can be found on the “Software” page. The latest version is always online.
2. Make sure the display port, USB and Power cables are plugged into the printer and then turn on the power using the rocker switch at the back. Turn on the screen using the switch at the front of the printer.
3. Go to your computer desktop, right click and open “Screen resolution”. Set your screens to “Multiple Displays” and “Extend this display mode”, keeping your computer monitor as the main screen. Make sure that the printer’s screen is set to a resolution of 3840 x 2160. There are videos online if you need further help.
4. Configure your computer so that the screen-saver does not come on and ensure that it does not have the power-saving mode enabled. If you forget to do this your computer may shut down mid process and the printer will switch off.

### MINIMUM COMPUTER REQUIREMENTS

- Dual Core processor or above
- Windows
- Software NOT compatible with MAC and Linux
- 2 GB RAM memory or above

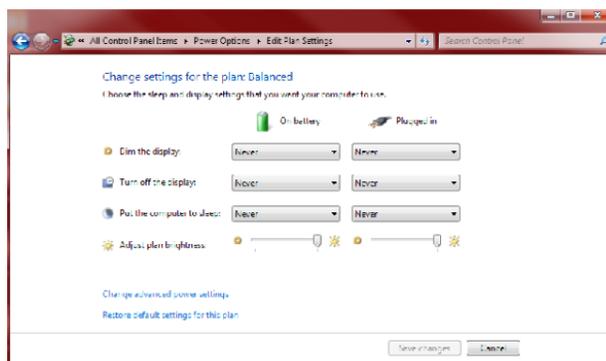
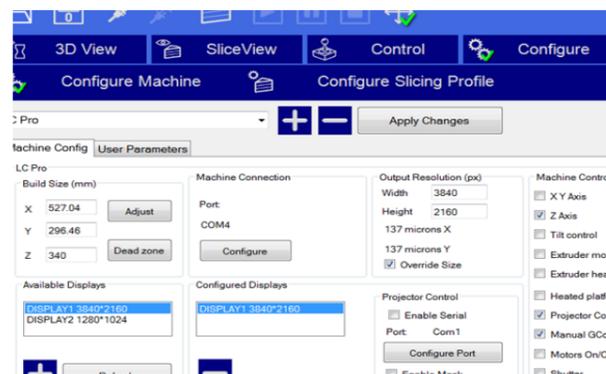
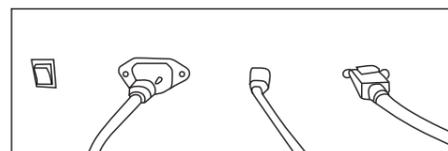


6. Execute the Creation Workshop software by double clicking on “CreationWorkshop.exe”. If the software requires a license number insert the license number supplied on the back of the printer.
7. In Creation Workshop, click on “Configure”, and then open the subfolder “Configure Machine”. In the configuration folder connect the printer to the computer by clicking on the button “Configure” in the Machine Connection section. Select the port you have connected the USB to and set the speed to 115200 and data bits to 8. Press “OK” and finally press “Apply Changes”. Now click [CONNECT ICON] to connect your computer and the Liquid Crystal.
8. If you are experiencing difficulties to start or connect your printer, go to our website [www.photocentric3d.com](http://www.photocentric3d.com), and visit “Support”. You will find videos that will run you through the issues you may find due to specific computer settings. Should you still find difficulties, please contact your national supplier or contact us at [info@photocentric.co.uk](mailto:info@photocentric.co.uk).

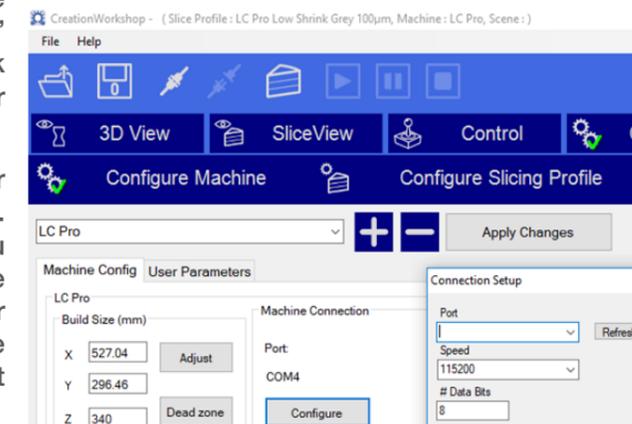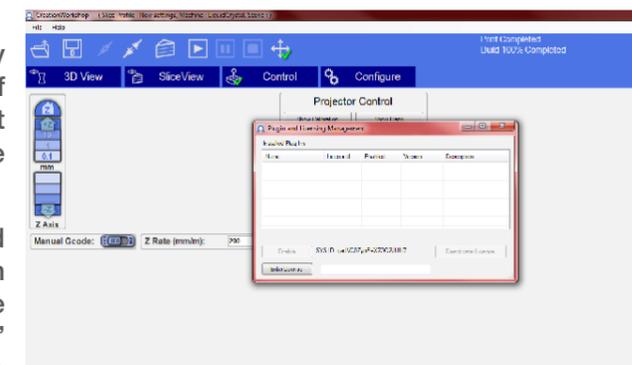



## 1.2 CONNECTING THE PRINTER

1. Connect the printer to the PC using the connect button.
2. Check that the printer has successfully connected by moving the drive up a small distance. Remember that the printer will not move unless the door is closed
3. If the printer doesn't connect successfully, go to the 'Configure' tab and press the 'Configure' button in the 'Machine Connection' frame. Choose a different COM port from the drop-down menu (if available). Press 'OK' then press 'Apply Changes'. Connect the machine again and try moving the drive (remember the door must be closed). If all COM Port options have been tried unsuccessfully, contact Photocentric for further support.

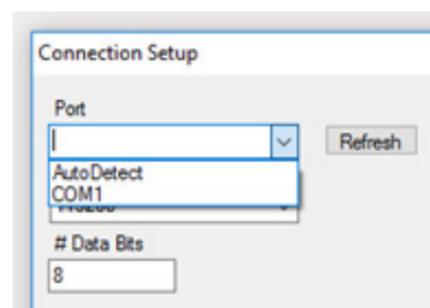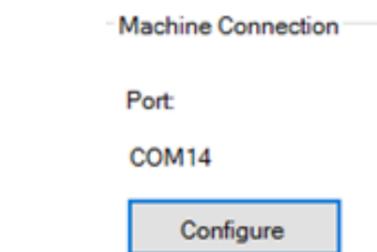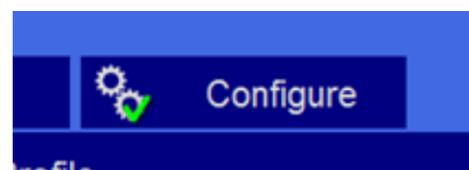


## 2. SLICING YOUR PRINT


1. Set up the machine profile in Creation Workshop as shown below. Remember to press 'Apply Changes'.
2. Set up the slicing profile in Creation Workshop as shown below. Remember to press 'Apply Changes'.
3. Open the STL file that you wish to print. Adjust scale, position, rotation etc using the controls provided on the right hand tool bar in Creation Workshop. Your printed item(s) should be positioned centrally within the build area. Add supports if required using the left hand tool bar in Creation Workshop. You may need to expand this tool bar by pressing the '+' button.
4. Slice the STL file using the button. Use the 'Slice View' tab to review the slice images. If you have difficulty generating the slices correctly, contact Photocentric for further support

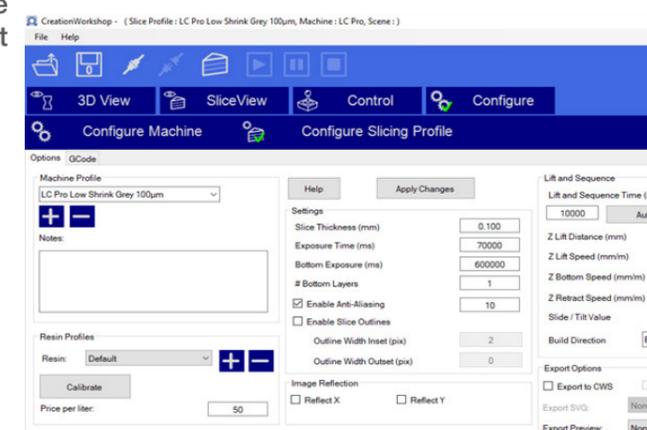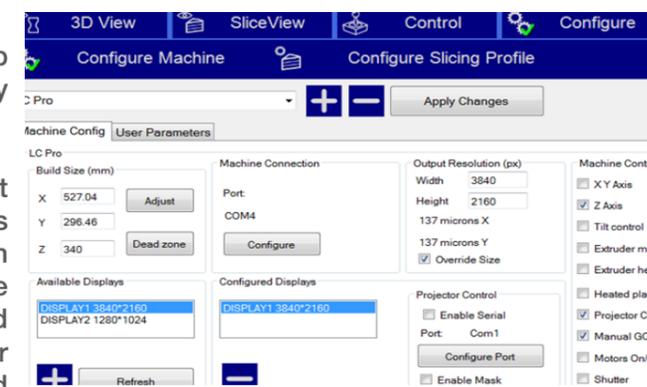



### 3. SETTING UP A PRINT

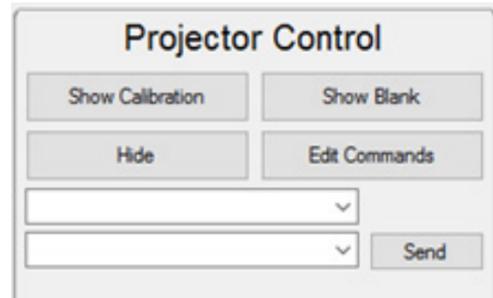

1. Check the first slice of your print on the printer's screen using the button below, in the 'Slice View' tab. (Use the push button on the front of the printer to turn the screen on and off.)
2. Return the screen to black by pressing the 'Show Blank' button in the 'Control' tab.
3. The vat should be inside the printer, empty and clean. Tighten the vat bolts firmly. They should not apply downward pressure to the vat. They are only there to prevent the vat moving horizontally or tipping.
4. On the print plate assembly, loosen the hex-head bolts that secure the L brackets. They should be loose enough to slide easily in the slots but not more. A hex key is provided in the accessory box.
5. Check that the drive carriages are at least 100mm above the bottom of the rails. Slide the print plate assembly into place in the printer. Push it back against the stops. Tighten the bolts that secure the print plate to the drive carriages.
6. Make sure that the print plate can still slide in the slots. Press the 'Home' button on creation workshop (the door must be closed).
7. Wait for the printer to reach the home position. If the print plate started in a very high position, it may stop before reaching home. If so, press the 'Home' button again. Press down evenly on the print plate with one hand and tighten the hex-head bolts that secure the L brackets. These bolts should be tightened firmly.
8. Close the door and move the print platform up 10mm.

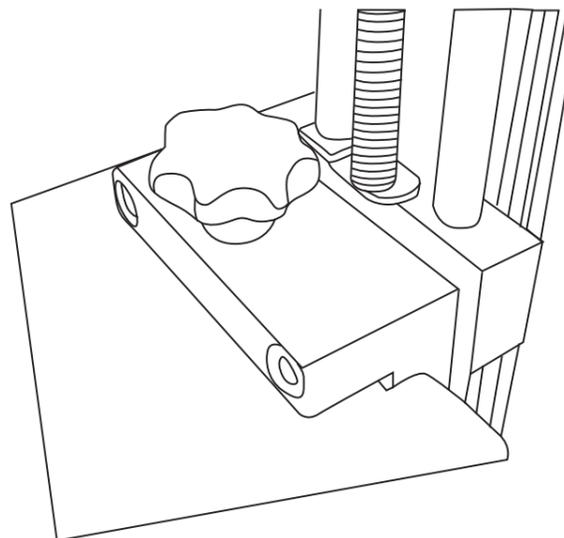


9. Check the volume of resin required in Creation Workshop. Make sure the circled icon has the green check mark to give the total volume. This will include all items and any supports. Add 700 cm<sup>3</sup> to this figure to allow for a full covering of resin in the bottom of the vat during the final layers of the print.
10. Wear protective gloves and measure out the resin. Be careful not to expose it to bright light for more than a few seconds. Excessive resin will make emptying the vat more difficult, insufficient resin will prevent the print from completing successfully. The maximum recommended volume of resin in the standard LC Pro vat is 4000 cm<sup>3</sup> (4 litres).
11. Carefully add the resin to the vat. Pour in the centre of the print plate and it will drain through the holes. Close the door and drive the print plate down 10mm. Wait a few seconds for the resin to settle. Press the 'Print' button in Creation Workshop to begin printing.

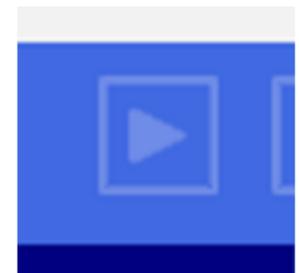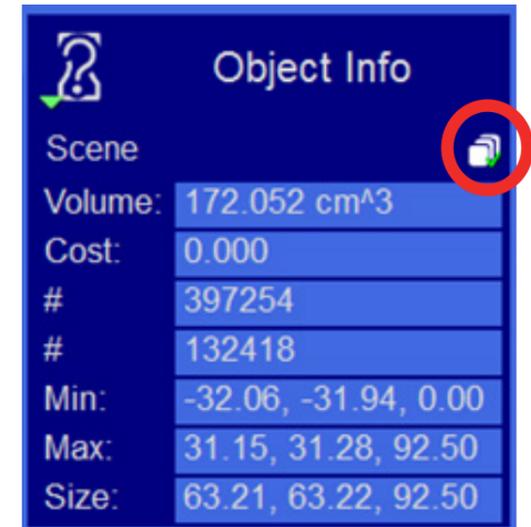

## 4. REMOVING THE FINISHED PART, CLEANING AND POST EXPOSING

1. When the print is complete, turn off the screen using the push-button on the front of the printer. Use Creation Workshop to drive the print plate up until the print is clear of the vat. Allow the print to drain for a few minutes to reduce the chance of drips.
2. Make preparations for cleaning the print. You will ideally need a large sink with a good supply of hot water. The ambient light level should be low. A spray bottle with a hot, very dilute solution of washing up liquid is also useful. A sponge or very soft brush can be used to achieve the best results. Alternatively use a large ultrasonic cleaner. Wear protective gloves.
3. Loosen the bolts that secure the print plate to the drive carriages. Grip the print plate L brackets firmly and take the weight of the print. Carefully slide the print plate towards you and out of the machine. Close the printer door take care not to drip resin.
4. Run the part under a strong jet of hot water then spray thoroughly with soapy water. Repeat as necessary. Make sure the water and soap reach all sides of the part. Use a sponge or soft brush to clean detailed parts of the print.
5. To make the print easier to remove from the platform, it is a good idea to heat the print plate in hot water. Use a scraper to carefully remove the printed part from the platform. At this point the printed part is still vulnerable to damage so handle it gently.

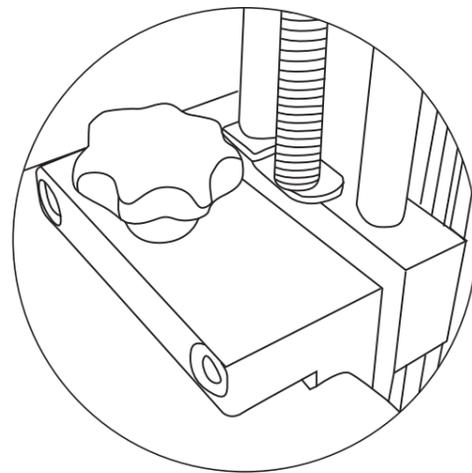


6. Place the printed part in a clear tub of clean water. The part should be fully covered by the water. Place the tub in a position where it is exposed to a strong source of light and leave it for at least 30 minutes. In the case of larger prints, you will need to turn the print over and leave it for another 30 minutes.
7. Clean the print plate thoroughly. Make sure all cured resin is removed from the underside of the plate as this may cause damage to the vat or screen. Hot soapy water and/or methylated spirits can be used to clean off uncured resin. Make sure the print plate is completely dry before returning it to the printer.
8. Once the printed part(s) have been fully post-exposed they should be removed from the water and dried thoroughly. Any support material can be removed using clippers. The part can be sanded if necessary.

## 5 EMPTYING AND CLEANING THE VAT

1. Before starting a print on the Liquid Crystal Pro, the vat should be emptied and cleaned. Wear protective gloves. Ensure that the ambient light level is not too high, don't work in direct sunlight and use low lighting where practical.
2. Prepare an area for cleaning the vat. You should have a smooth, flat, clean surface with plenty of space. Lay down two layers of paper towel to protect the vat film from scratches and soak up any spilled resin. Have a supply of paper towels, a bottle of methylated spirits, and a bin nearby. Do not work on a surface that could be stained or damaged by contact with resin.
3. Position a 5 litre resin bottle near the printer on a flat, stable surface and at a convenient height. Be sure that there is enough space in the bottle for all of the resin from the vat. Remove the lid of the bottle and insert the funnel (supplied in the accessory box) into the top. Place a clean filter (supplied in the accessory box) inside the funnel.
4. Remove the four vat bolts and set them aside. Grip the vat firmly by the handles and lift it carefully out of the printer. The vat will be heavy, especially if there is a large volume of resin remaining. Pour the resin gently into the funnel from one corner of the vat. Pour at a steady rate and be careful not to over-fill the funnel. Resin will flow over the flange of the vat; this is not a problem.
5. When most of the resin has drained from the vat, place it on the paper towels ready for cleaning. When the funnel has drained, remove
6. Use paper towels to clean up the resin on the flange of the vat. Be particularly careful to clean the resin out of the holes. If resin is allowed to cure in the holes it can obstruct the nuts and make it difficult to re-skin the vat. Methylated spirits can be used to help clean the vat body.
7. Use paper towels to clean up any further resin inside the vat. At this point it is important to remove any pieces of cured resin that remain in the vat. Anything left inside the vat could cause damage to the vat or screen when the printer is homed. It could also prevent successful printing. It is best not to apply methylated spirits directly to the vat film.
8. Once the vat is clean, inspect the film for any signs of damage or excessive wear. If there is a puncture, or obvious damage, replace the vat film. If the vat is in good condition, return it to the printer. Replace and tighten the vat bolts.

## 6. DETAILED CREATION WORKSHOP SOFTWARE INSTRUCTIONS

### Main screen

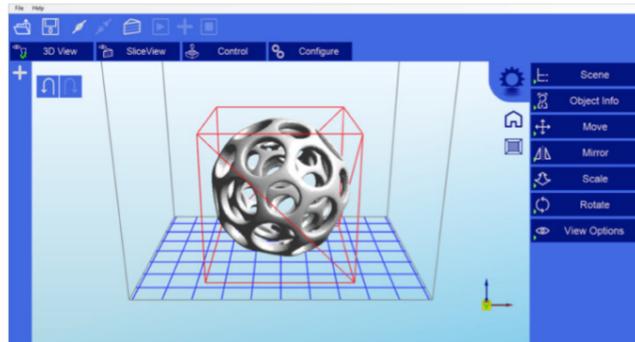

Click to open files in one of the following formats: .STL, .OBJ, .3DS or .AMF. You can also open scene files with the .CWS extension.



Click to save the current object as a .STL or .CWS file. The .CWS format allows you to prepare a scene to be printed repeatedly in the future, together with supports and positioning.



Click to start the connection between your computer and your Liquid Crystal 3d printer. Once the button is greyed out, this means that the printer is connected.



Click this button to disconnect your printer from the computer. If the button is greyed out, it means that the machine is currently disconnected.




These three buttons start, pause and stop a print. These buttons only become active once you have sliced your object.



3D View

Clicking this button allows you to view the 3D objects within their boundary box. You can add supports in this function.

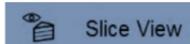


Slice View

Clicking this button accesses the "Slicing" screen. You can see the individual slices that have been generated as well as the G-code.



Control

This allows you to control the z axis motor, home it and lift it after a print has finished.

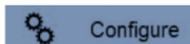

Configure

This is the setup screen that allows you to configure the slicing and printing profiles.

### 1. Loading a Model



Click here to 'Load' your file. Multiple objects can be loaded and manipulated independently. You can also open scene files with the .CWS extension.

### 2. Scene View

The Scene View allows you to manipulate various aspects of the scene.

#### Selecting

You can select a model by double clicking on the model, or selecting it with the scene view

#### Removing a Model

You can remove a model by right-clicking on the name in the scene graph and selecting "Remove". The Minus sign "-" will also remove the current model. You can also delete a model by selecting it and then pressing the "delete" key on your keyboard.

#### Cloning a model

You can select a model in the scene and click the "+" sign to clone it. The cloned object will appear

### 3. Object Info

This tabs provides you with information about your model




### 4. Move View

The Move function allows you to move objects on the build platform along the x:y:z axis by the distance entered.

From left to right, the other tools are:

The 'Place on Platform' button will position the bottom of the model to rest on the bottom of the build platform. The 'Center' button will center the model at (0,0,0).

- Auto-Arrange will automatically lay out all models to fit on the build platform. Any model that does not fit within the build platform will be moved outside the build area.

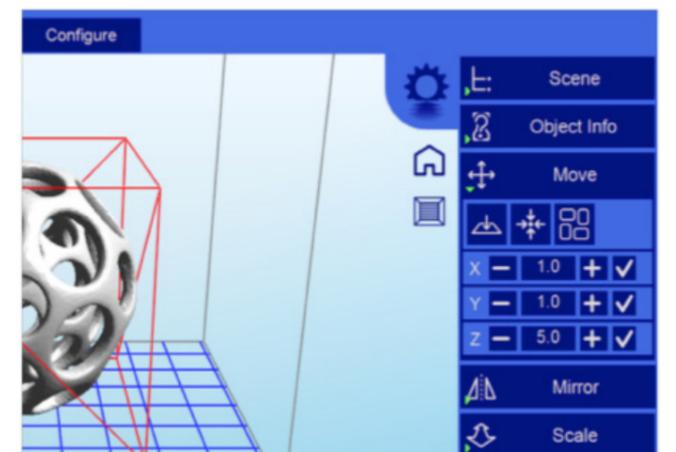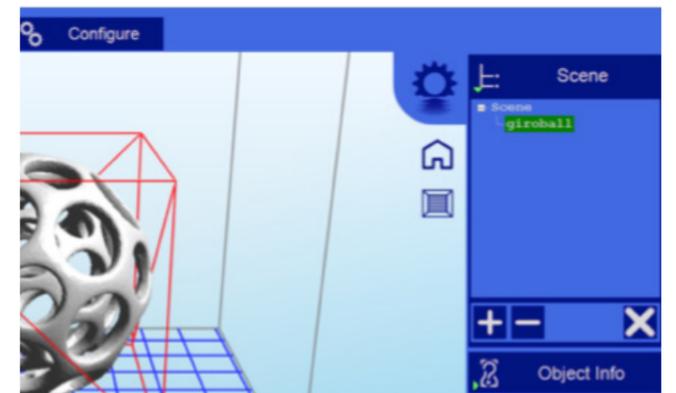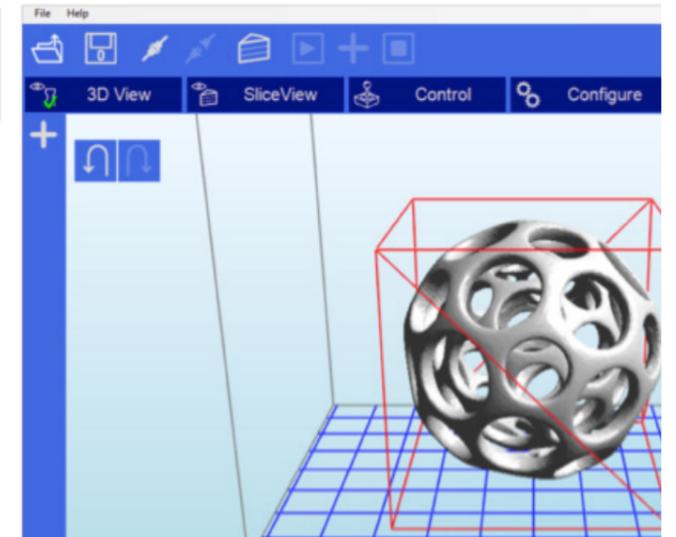

## 5. Mirroring Objects

The Mirror view allows you to mirror the selected object on the specified axis.

## 6. Scaling objects

A model can be scaled (reduced or increased) by selecting it, and using the 'Scale' view to enter in a new scaler value. Press the tick button to re-scale your object.

## 7. Rotating Objects

Rotating a model works in a similar way to moving a model. Simply select the model you want to work with, and use the X/Y/Z +/- buttons to rotate the model by your specified degrees.

## 8. View Options




The view option allows you to manipulate various views and models.

On the top row from left to right:

- 50% Alpha-Blending toggle. This will allow you to see through the objects in the scene to see the geometry
- Show Slice Preview on Scene. After slicing this toggles on/off the view of the 3D view of the current slice layer as selected by the horizontal scrollbar.
- Show Console. This toggle button shows or hides the debug window. This window is used for debugging purposes.

On the bottom row from left to right are tools to change the way the objects appear on the screen:

- Show objects with a bounding box.
- Show objects with an outline
- Show selected objects in a different color

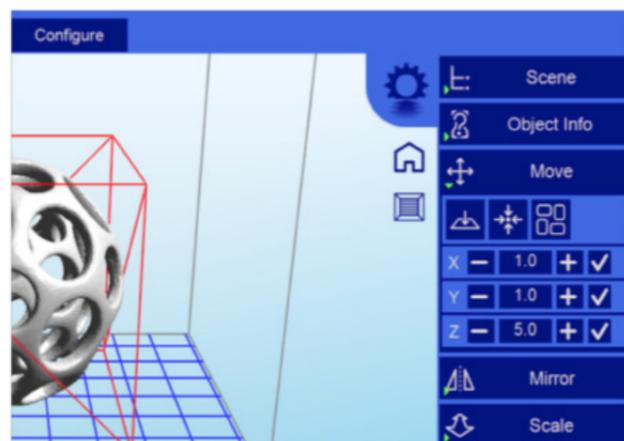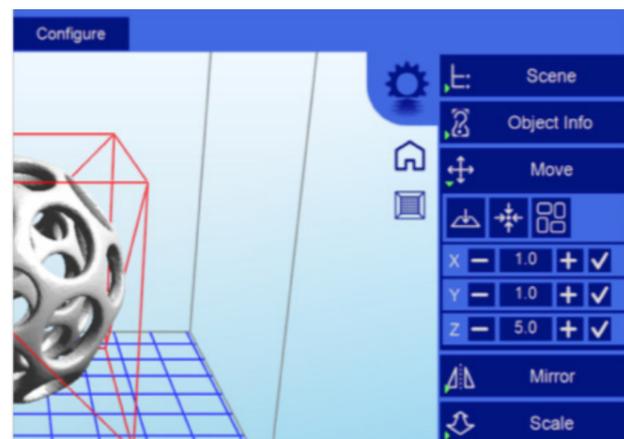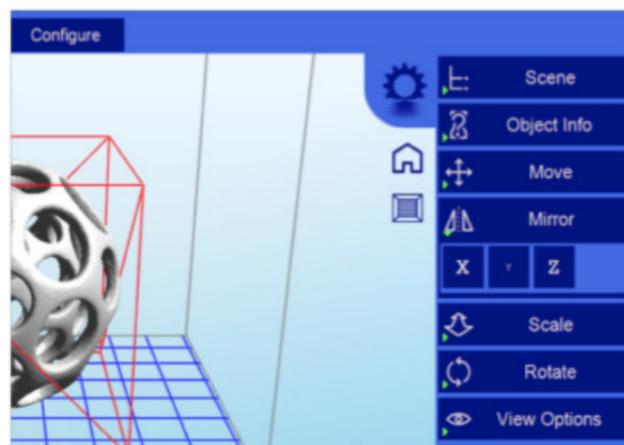

## 9. Working with Model Support tools

### Using Supports

Supports are sometime required to properly attach a model to the build space. Because of the nature of DPP the lower layers must be supported by the supports unless it has a wide surface in the first layers. We recommend checking no supports pass through your object. If they do, you can delete them and manually add others if needed.

### Adding a single Support

A single support can be generated by clicking the manual support button.

### Moving Supports

After a manual or automatic support has been generated, individual supports can be moved around the x:y plane the same way models can be moved. Select the support by double clicking on it to select it, and hold down the 'Shift' key on your keyboard and move the mouse. Supports will automatically scale vertically under the model they support.

### Angled Supports

Supports can be angled inwards towards the objects they support. This can often resolve clearance issues with vertical supports. You can turn a vertical support into an angled support by selecting it, and holding the 'Ctrl' key and clicking on the model you want to support.

### Manual Configuration



Under the Support Generation view, you can click 'show downward facing polys'. This will highlight all polygons in the model that are pointed downward by the specified degree. This helps you manually place supports under un-supported downward facing areas of a model.

### Auto Support on Grid

After a model is loaded into the scene and selected, you can automatically generate a 'bed of nails' support for the model by selecting . You can specify the grid spacing and the size of the generated supports. If you wish to only generate supports on downward facing polygons, check the boxes under 'support general' and 'generate only on downward'

### Adaptive supports

You can add supports to areas in the model that are unsupported. There are 2 algorithms to help you accomplish this.

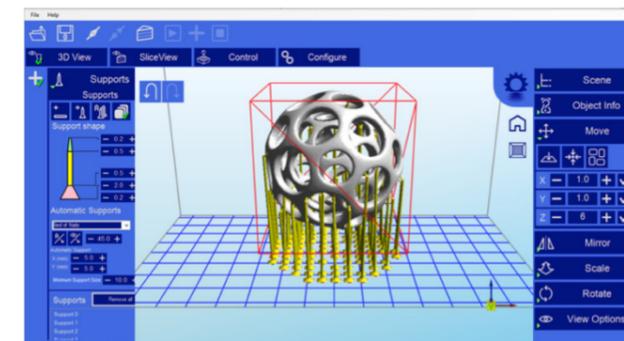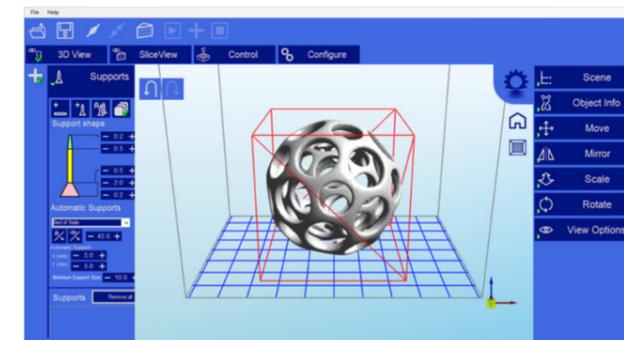

## 10. Saving a Scene



Click to save the current object as a .STL or .CWS file. The .CWS format allows you to prepare a scene to be printed repeatedly in the future, together with supports and positioning.


After one or more models have been loaded and manipulated on the build platform, the entire scene can be saved as an STL model for later use. Simply click on the 'File->Save Scene STL' menu item to save the scene model. This will flatten all models in a scene into a single STL file. Scenes can also be saved to CWS files. These scene files can be used to create a scene with supports, slice the scene, and later load to print your scene without the need for re-slicing.

## 11. Slice View

In the Slice View screen we get the following information:

There are two buttons for each of the available options.

- The first option has the same name as the screen itself (Slice View). In this setting we can see (as shown in the image) each successive layer of the generated "Slicing". With the lower bar we can scroll through the entire slicing result to check each of the layers. In the upper left corner we can see the total number of layers that have been generated. In the lower left corner we have a (  ) button to turn the screen on and expose the selected layer.
- G-Code View: On this screen you can see the G-code generated during the "Slicing" operation. This option is intended for advanced users. We recommend to leave this screen untouched.

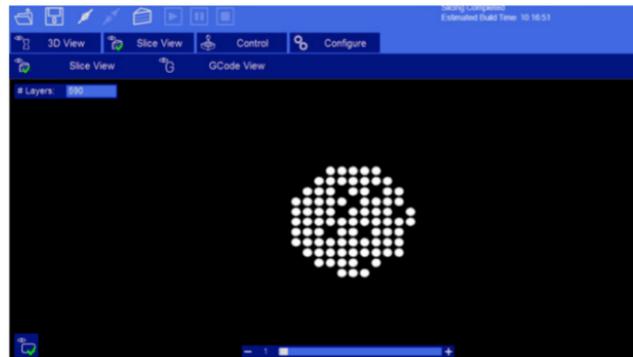

You can change the currently selected slicing profile to use. Click the 'Slice' button to begin slicing. You can stop slicing by pressing the 'Cancel' button. If your slicing profile is configured to export images, a progress bar will appear here. Otherwise, just the gcode for the scene will be generated and the images will be rendered during build-time.

## 12. Slicing a Model



Once you have loaded one of the models, configured your machine profile, and configured your build & slicing profile, you can slice a model. Choose the slice icon from the toolbar to bring up the slicing screen.